

## How to Setup the PSC Barcode Scanner

The following barcodes need to be scanned in order to make the PSC Barcode Scanner work correctly together with Smartlaunch. You only need to run through the barcodes once – even though you change the computer.

Set: Enter Programming



Factory Defaults



Send Control Characters



Prefix = Ctrl+E (ENQ)



Suffix = Ctrl+B (STX)



Enable AutoSense Stand M



Do only include the above barcode if you have an **auto sense stand**.

End: Exit Programming

